

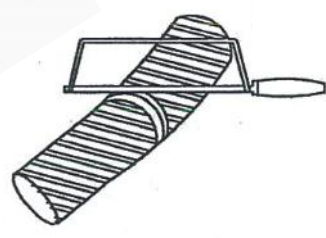


Installation of a Flexible Stainless Steel Liner

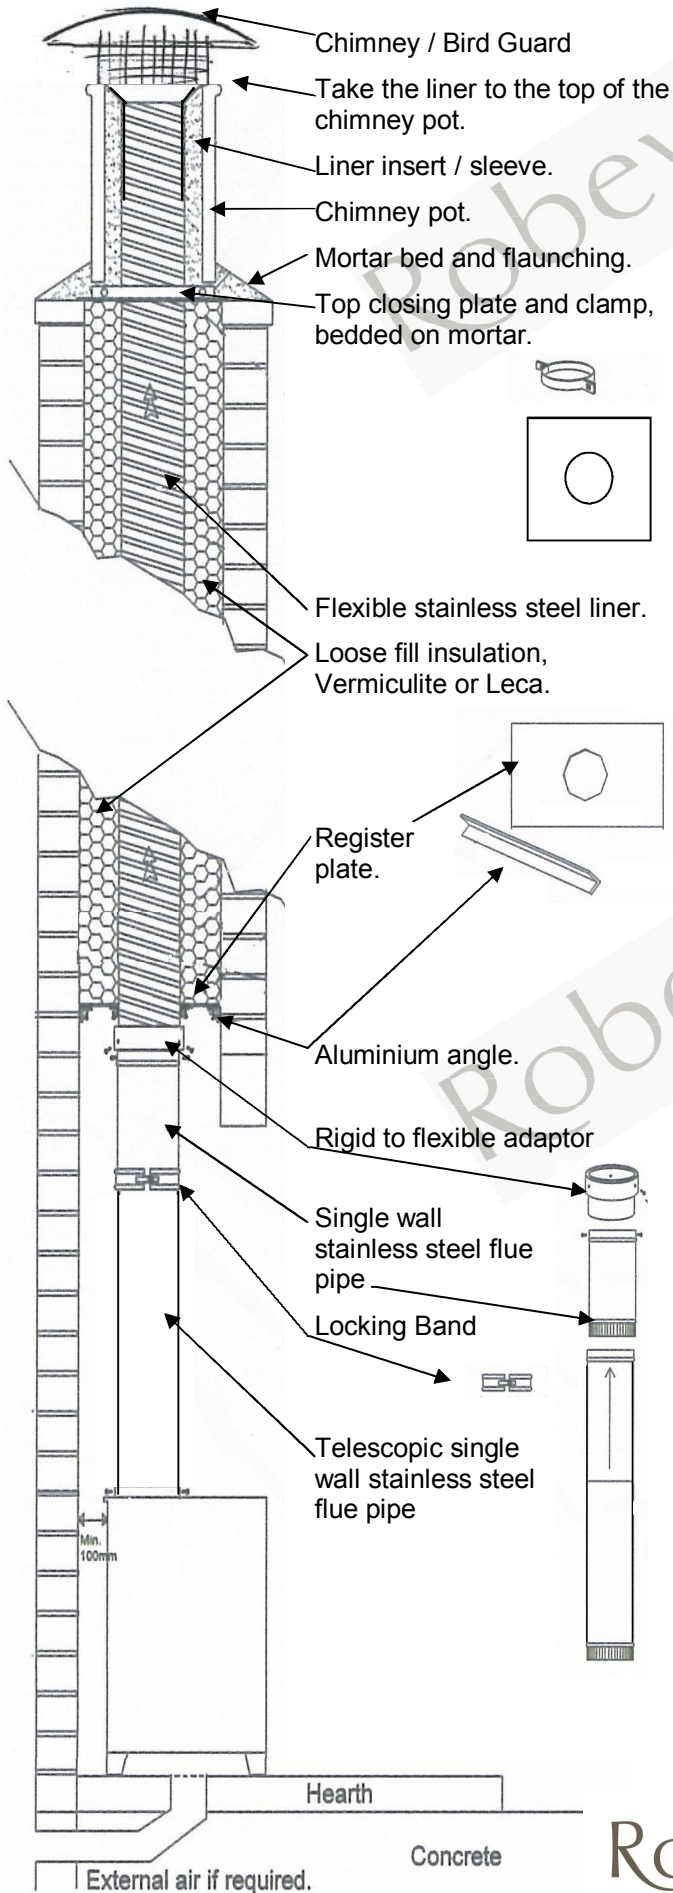


Ensure that the chimney has been thoroughly cleaned before any work commences.


Mark round the flexible liner and tape around either side of the mark. The liner can be cut with either a saw or snips. Always wear protective gloves and safety goggles.

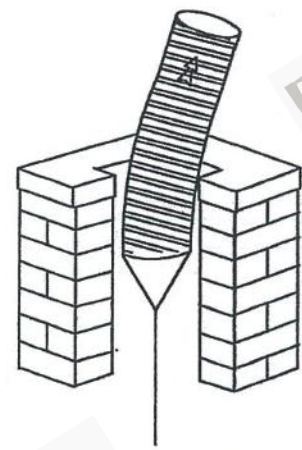

Remove any chimney pots or un-suitable capping. Fasten a short length of liner to a rope and draw through the chimney to check for obstructions.

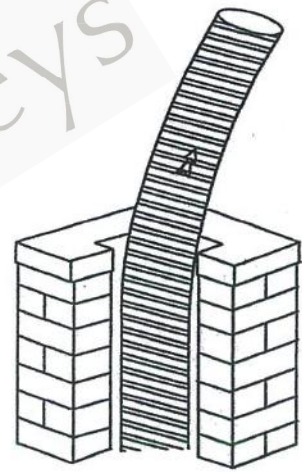

With one person at the bottom use a pull rope to draw the entire length of the liner from the top of the chimney to the bottom. Ensure that the arrowheads pointing upwards.

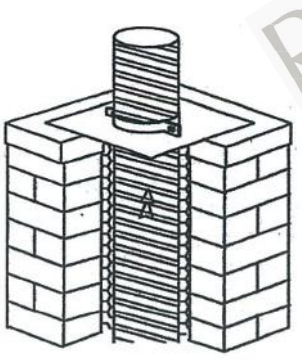

At the base of the chimney fix a register plate in to position.

At the top, pour Vermiculite / Leca insulation into the space between the liner and the wall of the chimney. Position the top closing plate around the liner and tighten the top bracket around the liner immediately above the closing plate. Replace the chimney pot and flaunch mortar around the pot. Insert a liner insert / sleeve and fit a bird guard / cowl.

Robeys

A PASSION FOR QUALITY